

INSTRUKSJONER TIL BRUKERE AV MIDLERTIDIGE ELEKTRISKE ANLEGG

1. En kompetent person skal ha tilsyn med anlegget og være ansvarlig for driften. Feil bruk av det elektriske anlegget kan medføre fare for personskade og brann.
2. Sentralen skal plasseres loddrett eller på stativ, og med fritt betjeningsområde foran sentralen.
3. Faste tilkoblinger av kabler og bytte av sikringer skal bare utføres av fagfolk. Ved fast tilkobling av gummikabler skal strekkavlastningens klemflate være utført i isolasjonsmateriale. Ikke-fagfolk skal kun betjene jordfeilbryter, automatsikring og uttak for stikkontakter.
4. Sentralens dører skal være lukket og om nødvendig også låst. Dørene skal bare åpnes ved betjening av sentralen.
5. Elektriske apparater som er koblet til sentralen, skal kobles fra eller gjøres spenningsløse når de ikke er i bruk, for å unngå utilsiktet igangsetting eller anven delse av disse.
6. De elektriske apparatene som brukes, må oppfylle forskriftene og skal enten være utstyrt med ekstra isolasjon eller, i klasse 1-utførelse, med jordet stikkontakt.
7. Kabler må legges slik at de ikke blir skadet. Det gjelder kabler både innenfor og utenfor dørene.
8. Kabler eller apparater med feil skal frakobles og ikke tas i bruk igjen før de defekte delene er skiftet eller reparert.
9. Knivsikring må bare byttes av kompetent personale.

INSTRUCTIONS FOR USERS OF TEMPORARY ELECTRICAL INSTALLATIONS

1. Operation of the installation must be supervised by an authorised person. Incorrect use of the electrical installation could mean risk of personal injury and fire.
2. The distribution unit must be installed vertical or on a stand so that there is free access in front of the unit.
3. Permanent cable connection or replacement of fuses may only be carried out by qualified personnel. Permanently connected rubber-insulated cables must be secured with a restraint that has an insulating gripping surface. Unqualified personnel may only operate earth leakage circuit breakers, miniature circuit breakers and plug sockets.
4. Distribution unit doors must be closed and, where required, also locked. Doors must only be left open when carrying out work on the distribution unit.
5. Electrical equipment that is connected to distribution units must be disconnected or switched off when not in use in order to avoid unintentional starting up or switching on.
6. Electrical equipment that is used must comply with the requirements and must either have additional insulation or comply with class I and have an earthed plug.
7. Cables inside and outside the doors must be routed so as to avoid damaging them.
8. Cables or equipment that are defective must be disconnected and not used until the defective parts have been replaced or repaired.
9. Blade fuses may only be replaced by personnel who have the necessary training.

ARTIKELNR / ARTICLE NO. EB14731			
MÅRKSTRØM/ CURRENT RATING 63	A		
SPÅNNING/ VOLTAGE 400	V		
MEASURING EQUIPMENT			
CURR- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING/ FIXED CONNECTIONS			
<125A	>125A		
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS			
16A			
8			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
1	1	1	
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
1	1	1	
JFB/RCD/RCBO			
0,01A	0,03A	0,1A	
6			
JFB/RCD/RCBO			
0,3A	0,5A	Variable	
1			
VIKT/WEIGHT			
12 kg			

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.


U 63MASA/8111-601 EN 4P




RITAD AV/DRAWN BY CG	DATUM/DATE 191018	NEXT SHEET 2	SHEET 1
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB14731	

A B C D E F G H J K


660

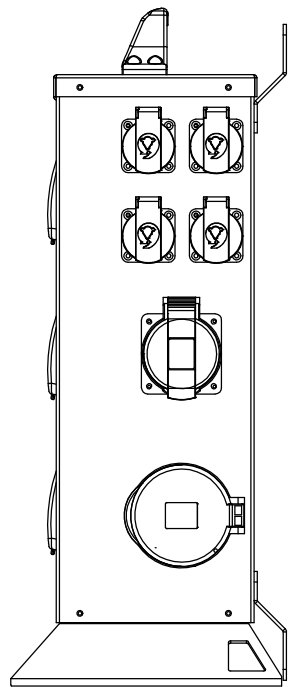

255

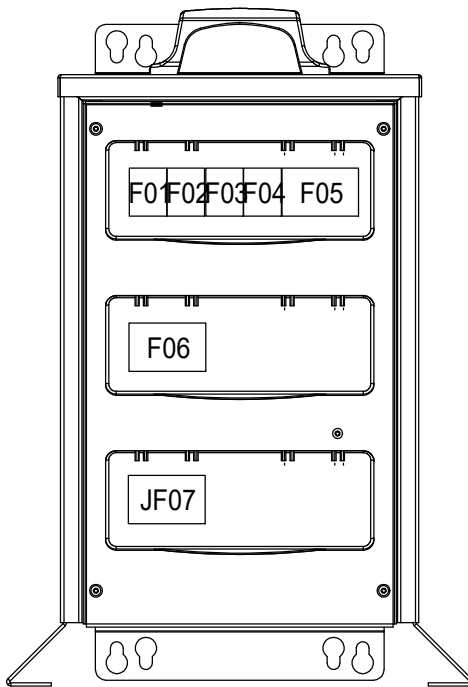

435

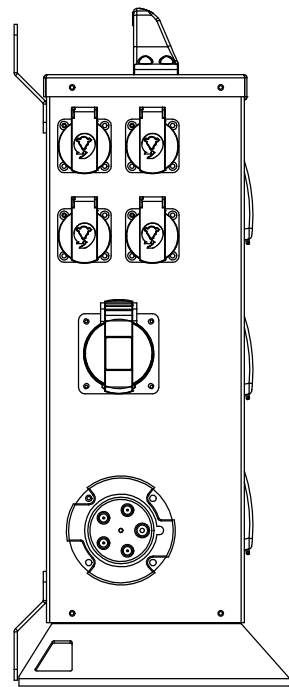

ARTIKELNR /
ARTICLE NO.
EB14731

MÄRKSTRÖM /
CURRENT RATING
63 **A**

SPÄNNING /
VOLTAGE
400 **V**

MEASURING
EQUIPMENT
CURR-
TRAFO-
SPACE ENERGY-
METER-
SPACE

FAST ANSLUTNING /
FIXED CONNECTIONS
<125A >125A

CEE-OUTLETS
3-POLE
16A 32A 63A 125A

SCHUKO OUTLETS
16A
8

CEE-OUTLETS
4-POLE
16A 32A 63A 125A

CEE-OUTLETS
5-POLE/400V
16A 32A 63A 125A

JFB/RCD/RCBO
0,01A 0,03A 0,1A
6

JFB/RCD/RCBO
0,3A 0,5A Variable
1


VIKT/WEIGHT
12 **kg**

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 63MASA/8111-601 EN 4P



RITAD AV/DRAWN BY CG	DATUM/DATE 191018	NEXT SHEET 3	SHEET 2
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB14731	

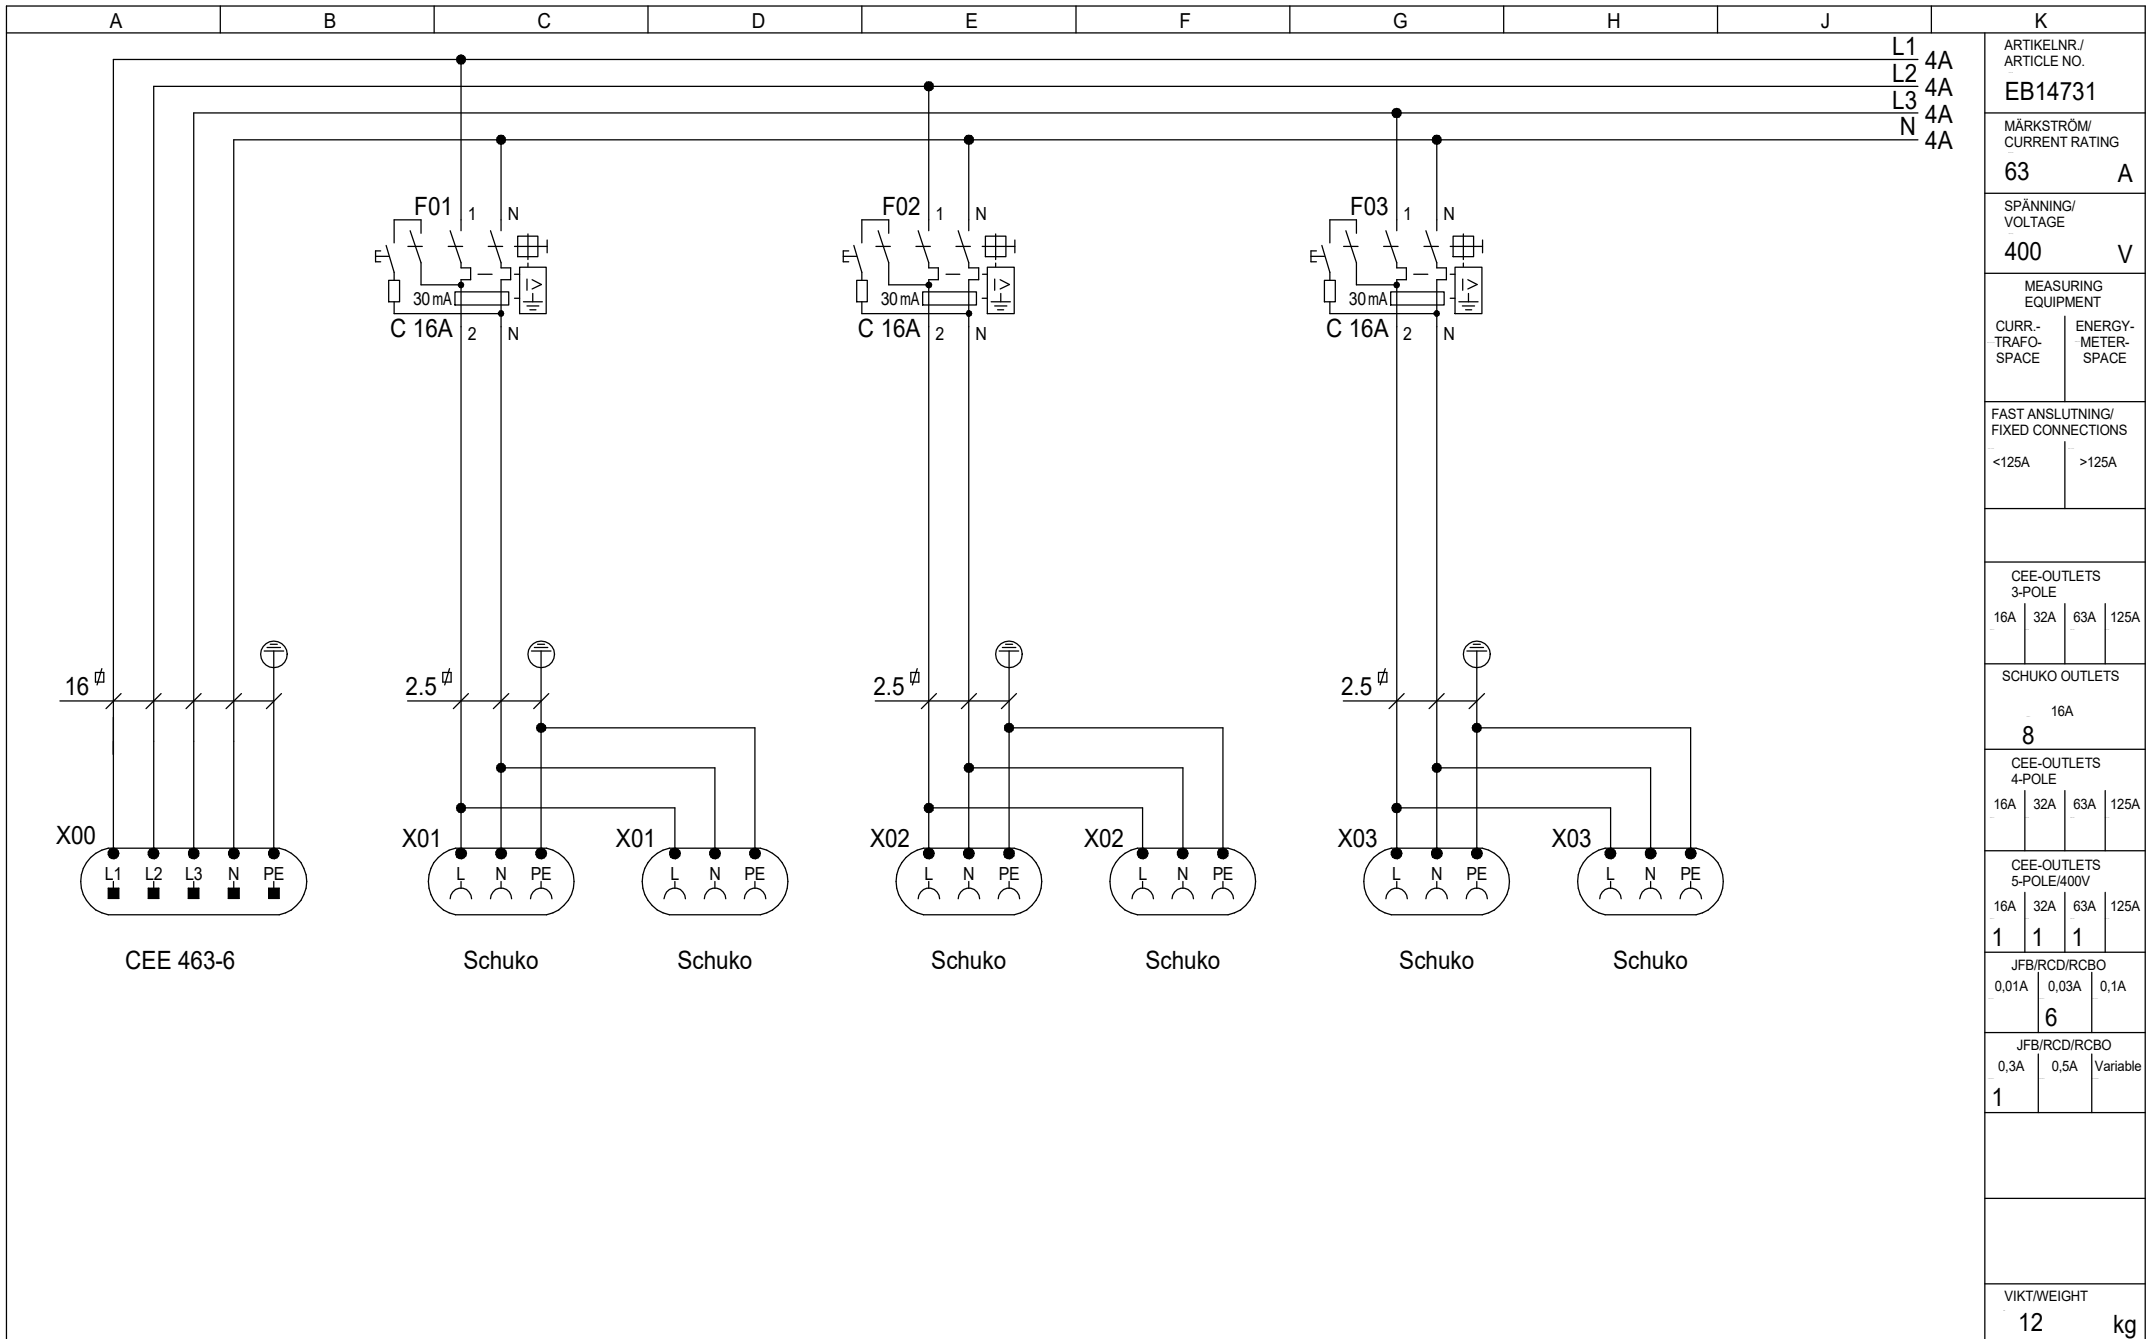

L1 4A
L2 4A
L3 4A
N 4A


ARTIKELNR./ ARTICLE NO.		EB14731	
MÄRKSTRÖM/ CURRENT RATING		63 A	
SPÄNNING/ VOLTAGE		400 V	
MEASURING EQUIPMENT			
CURR- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING/ FIXED CONNECTIONS			
<125A		>125A	
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS			
16A			
8			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
1	1	1	
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
1	1	1	
JFB/RCD/RCBO			
0,01A	0,03A	0,1A	
6			
JFB/RCD/RCBO			
0,3A	0,5A	Variable	
1			
VIKT/WEIGHT			
12			kg

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 63MASA/8111-601 EN 4P



RITAD AV/DRAWN BY	DATUM/DATE	NEXT SHEET	SHEET
CG	191018	4	3
SIGN	REVISION/ISSUE	RITINGS NR./DRAWING	
	A*	EB14731	

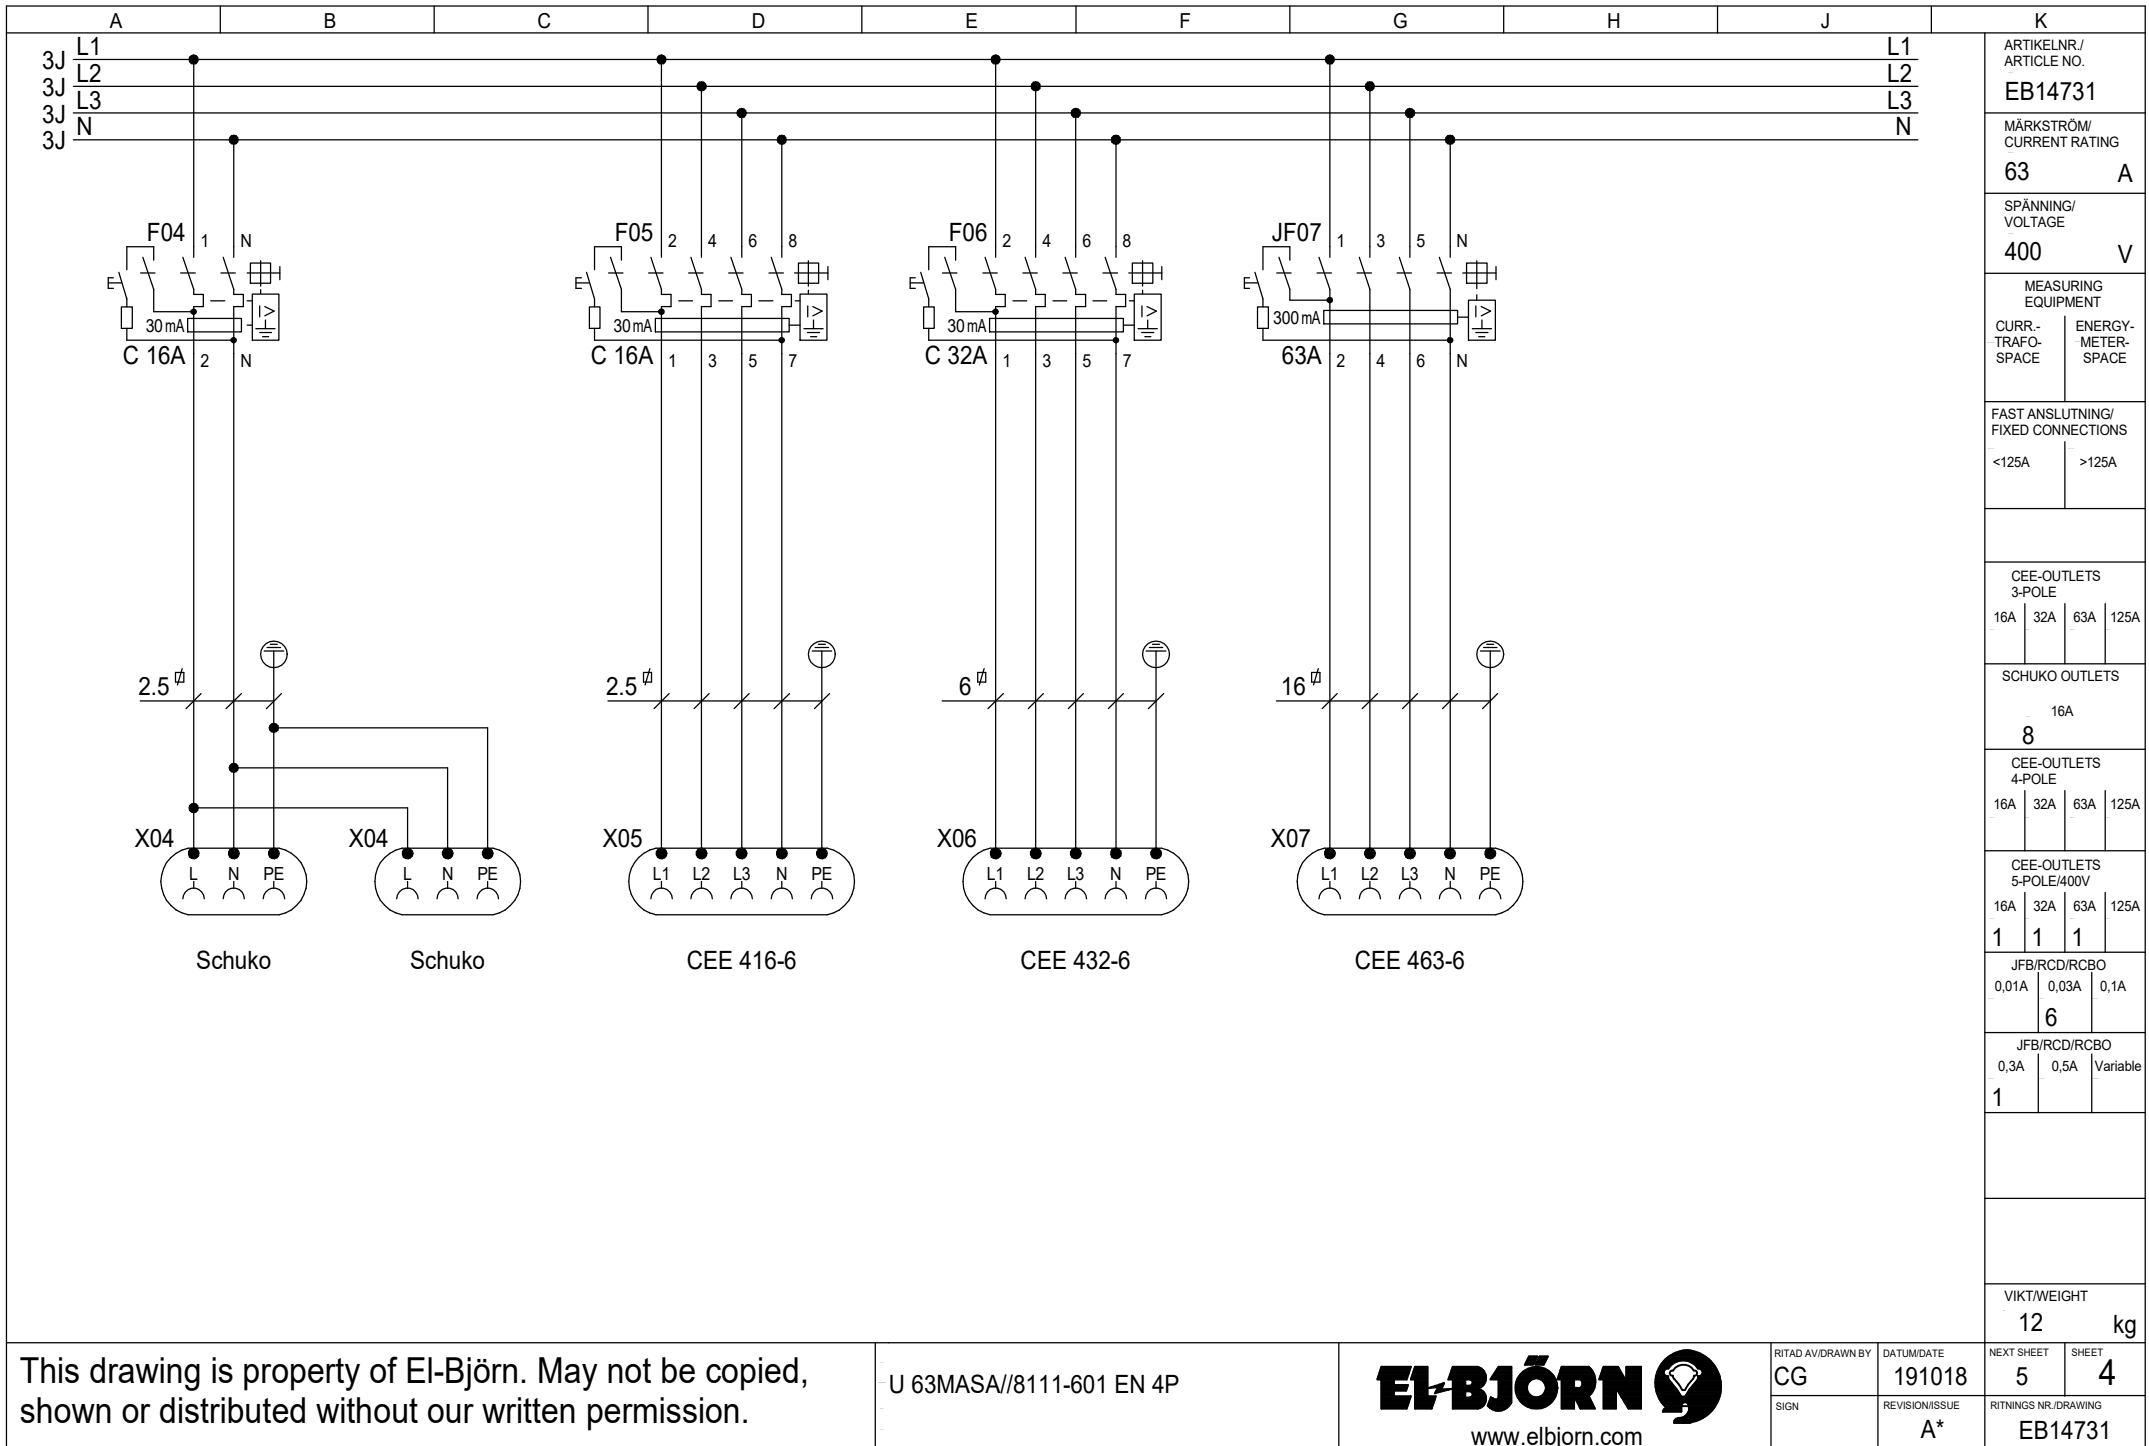

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 63MASA/8111-601 EN 4P



RITAD AV/DRAWN BY CG	DATUM/DATE 191018	NEXT SHEET 5	SHEET 4
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB14731	

A		B	C	D	E	F	G	H	J	K
PC.	Position	Description	Type	Manufacturer	Data	Article No.	E-number(SE)		ARTIKELNR / ARTICLE NO. EB14731	
1	-	Botten	BP	El-Björn AB	MASA	193102			MÄRKSTRÖM/ CURRENT RATING 63 A	
1		Front	MASA	El-Björn AB	63	193103			SPÄNNING/ VOLTAGE 400 V	
1		Plasthandtag	142, Svart	Roca		87047			MEASURING EQUIPMENT	
1		Svep	MASA	El-Björn AB	8111	193115			CURR- TRAFO- SPACE	
3		Säkringslock	13mod	PCE		9006513			ENERGY- METER- SPACE	
1		Tak	MASA	El-Björn AB		193101			FAST ANSLUTNING/ FIXED CONNECTIONS	
2		Väggfäste	MASA	El-Björn AB		193110			<125A >125A	
4	F01-F04	RCBO	PKPM2-16/2/C/003-A	Eaton	10kA, C 16A, 30mA	65884	2162432		CEE-OUTLETS 3-POLE	
1	F05	RCBO	mRB6-16/3N/C/003-A	Eaton	6kA, C 16A, 30mA	120660			16A 32A 63A 125A	
1	F06	RCBO	mRB4-32/3N/C/003-A	Eaton	4,5kA, C 32A, 30mA	167508			SCHUKO OUTLETS	
1	JF07	RCD	PFIM-63/4/03-A-MV	Eaton	63A, 300mA, 4P, A	235445	2162249		16A	
1	X00	Intag	463BU6	ABB	63A, 400V, IP44	2CMA167234R1000	2417355		8	
8	X01-X04	Schukouttag	Typ F	Mennekes	230V, 16A, IP54	11020EB			CEE-OUTLETS 4-POLE	
1	X05	Uttag	416RU6	ABB	16A, 400V, IP44	2CMA192642R1000	2416633		16A 32A 63A 125A	
1	X06	Uttag	432RU6	ABB	32A, 400V, IP44	2CMA192658R1000	2416660		CEE-OUTLETS 5-POLE/400V	
1	X07	Uttag	463RU6	ABB	63A, 400V, IP44	2CMA192664R1000	2416680		16A 32A 63A 125A	
									1 1 1	
									JFB/RCD/RCBO	
									0,01A 0,03A 0,1A	
									6	
									JFB/RCD/RCBO	
									0,3A 0,5A Variable	
									1	
									VIKT/WEIGHT	
									12 kg	

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 63MASA/8111-601 EN 4P



RITAD AV/DRAWN BY CG	DATUM/DATE 191018	NEXT SHEET	SHEET 5
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB14731	