

INSTRUKSJONER TIL BRUKERE AV MIDLERTIDIGE ELEKTRISKE ANLEGG

1. En kompetent person skal ha tilsyn med anlegget og være ansvarlig for driften. Feil bruk av det elektriske anlegget kan medføre fare for personskade og brann.
2. Sentralen skal plasseres loddrett eller på stativ, og med fritt betjeningsområde foran sentralen.
3. Faste tilkoblinger av kabler og bytte av sikringer skal bare utføres av fagfolk. Ved fast tilkobling av gummikabler skal strekkavlastningens klemflate være utført i isolasjonsmateriale. Ikke-fagfolk skal kun betjene jordfeilbryter, automatsikring og uttak for stikkontakter.
4. Sentralens dører skal være lukket og om nødvendig også låst. Dørene skal bare åpnes ved betjening av sentralen.
5. Elektriske apparater som er koblet til sentralen, skal kobles fra eller gjøres spenningsløse når de ikke er i bruk, for å unngå utilsiktet igangsetting eller anvendelse av disse.
6. De elektriske apparatene som brukes, må oppfylle forskriftene og skal enten være utstyrt med ekstra isolasjon eller, i klasse 1-utførelse, med jordet stikkontakt.
7. Kabler må legges slik at de ikke blir skadet. Det gjelder kabler både innenfor og utenfor dørene.
8. Kabler eller apparater med feil skal frakobles og ikke tas i bruk igjen før de defekte delene er skiftet eller reparert.
9. Knivsikring må bare byttes av kompetent personale.

INSTRUCTIONS FOR USERS OF TEMPORARY ELECTRICAL INSTALLATIONS

1. Operation of the installation must be supervised by an authorised person. Incorrect use of the electrical installation could mean risk of personal injury and fire.
2. The distribution unit must be installed vertical or on a stand so that there is free access in front of the unit.
3. Permanent cable connection or replacement of fuses may only be carried out by qualified personnel. Permanently connected rubber-insulated cables must be secured with a restraint that has an insulating gripping surface. Unqualified personnel may only operate earth leakage circuit breakers, miniature circuit breakers and plug sockets.
4. Distribution unit doors must be closed and, where required, also locked. Doors must only be left open when carrying out work on the distribution unit.
5. Electrical equipment that is connected to distribution units must be disconnected or switched off when not in use in order to avoid unintentional starting up or switching on.
6. Electrical equipment that is used must comply with the requirements and must either have additional insulation or comply with class I and have an earthed plug.
7. Cables inside and outside the doors must be routed so as to avoid damaging them.
8. Cables or equipment that are defective must be disconnected and not used until the defective parts have been replaced or repaired.
9. Blade fuses may only be replaced by personnel who have the necessary training.

ARTIKELNR./
ARTICLE NO.
EB15785

MÅKSTRØM/
CURRENT RATING
125 A

SPÅNNING/
VOLTAGE
230 V

MEASURING
EQUIPMENT
CURR.-
TRAFO-
SPACE ENERGY-
METER-
SPACE

FAST ANSLUTNING/
FIXED CONNECTIONS
<125A >125A

CEE-OUTLETS
3-POLE
16A 32A 63A 125A

SCHUKO OUTLETS
16A
6

CEE-OUTLETS
4-POLE
16A 32A 63A 125A
3 1

CEE-OUTLETS
5-POLE/400V
16A 32A 63A 125A

JFB/RCD/RCBO
0,01A 0,03A 0,1A
6 3

JFB/RCD/RCBO
0,3A 0,5A Variable

VIKT/WEIGHT
100 kg

RITAD AV/DRAWN BY
CG

DATUM/DATE
220407

NEXT SHEET SHEET
2 1


ZSF 125NBC 230//6031-601 EN



REVISION/ISSUE
A*

RITINGS NR./DRAWING
EB15785

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

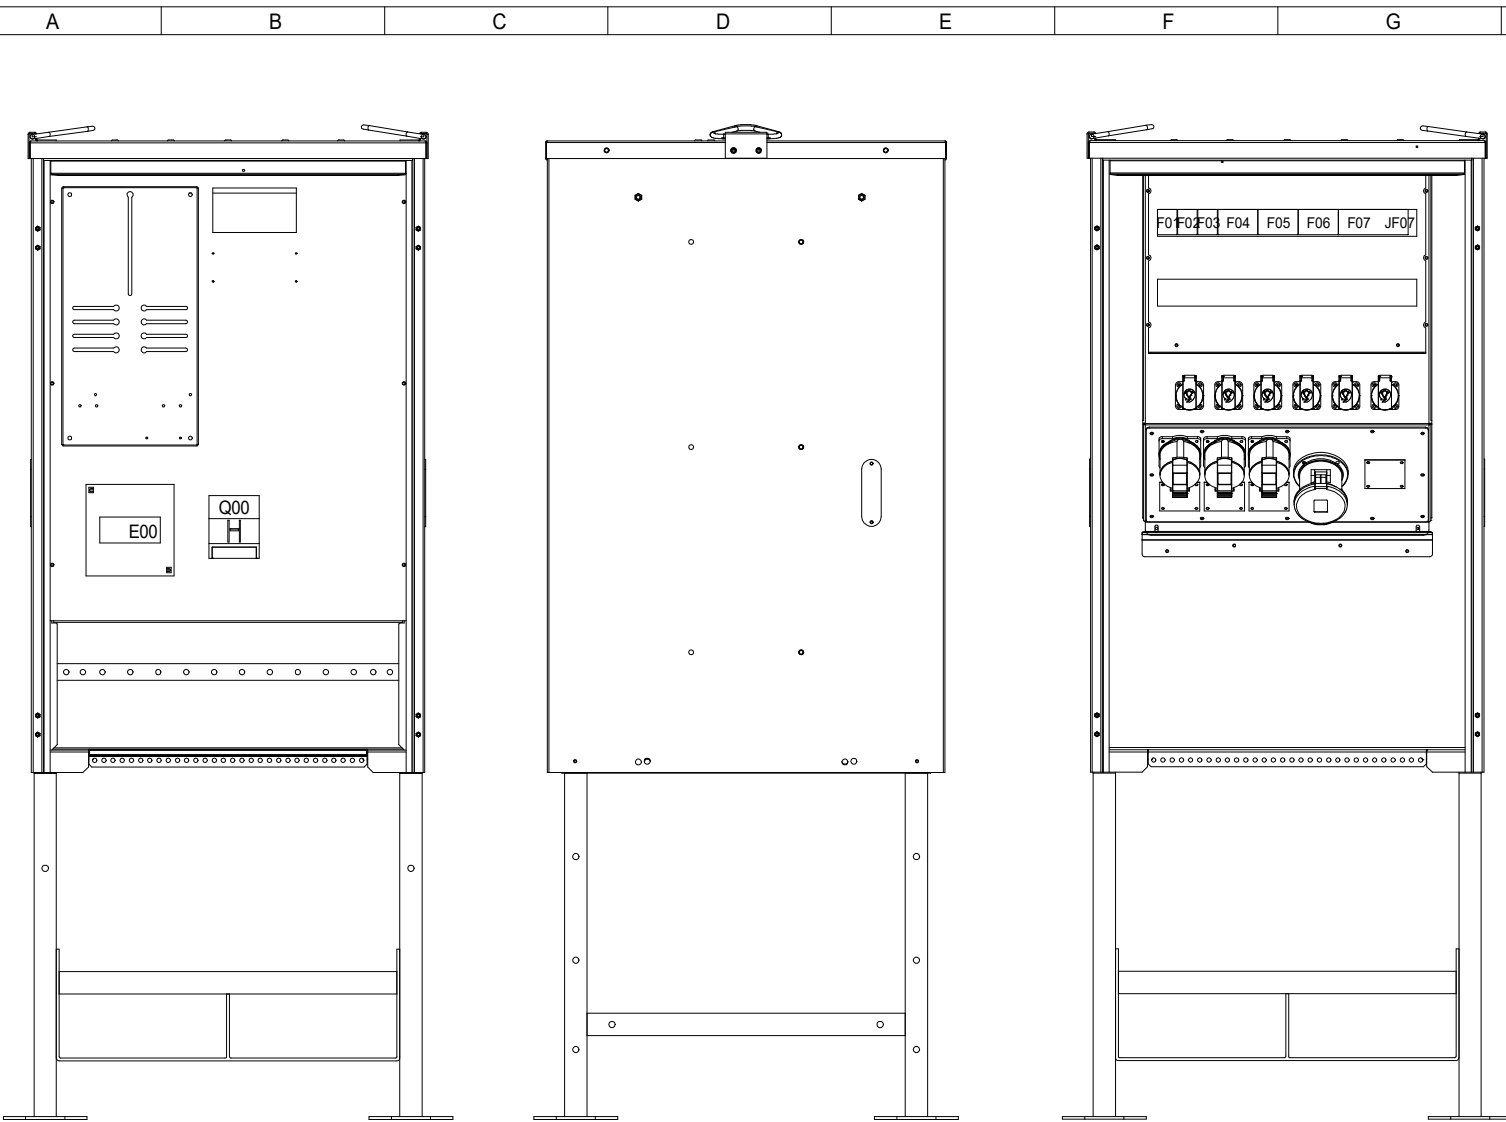 


ARTIKELNR./ ARTICLE NO.		EB15785	
MÄRKSTRÖM/ CURRENT RATING		125	A
SPÄNNING/ VOLTAGE		230	V
MEASURING EQUIPMENT			
CURR.- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING/ FIXED CONNECTIONS			
<125A		>125A	
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS			
16A			
6			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
3		1	
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
JFB/RCD/RCBO			
0,01A	0,03A	0,1A	
6		3	
JFB/RCD/RCBO			
0,3A	0,5A	Variable	
VIKT/WEIGHT			
100		kg	

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

ZSF 125NBC 230//6031-601 EN



RITAD A/DRAWN BY CG	DATUM/DATE 220407	NEXT SHEET 3	SHEET 2
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB15785	

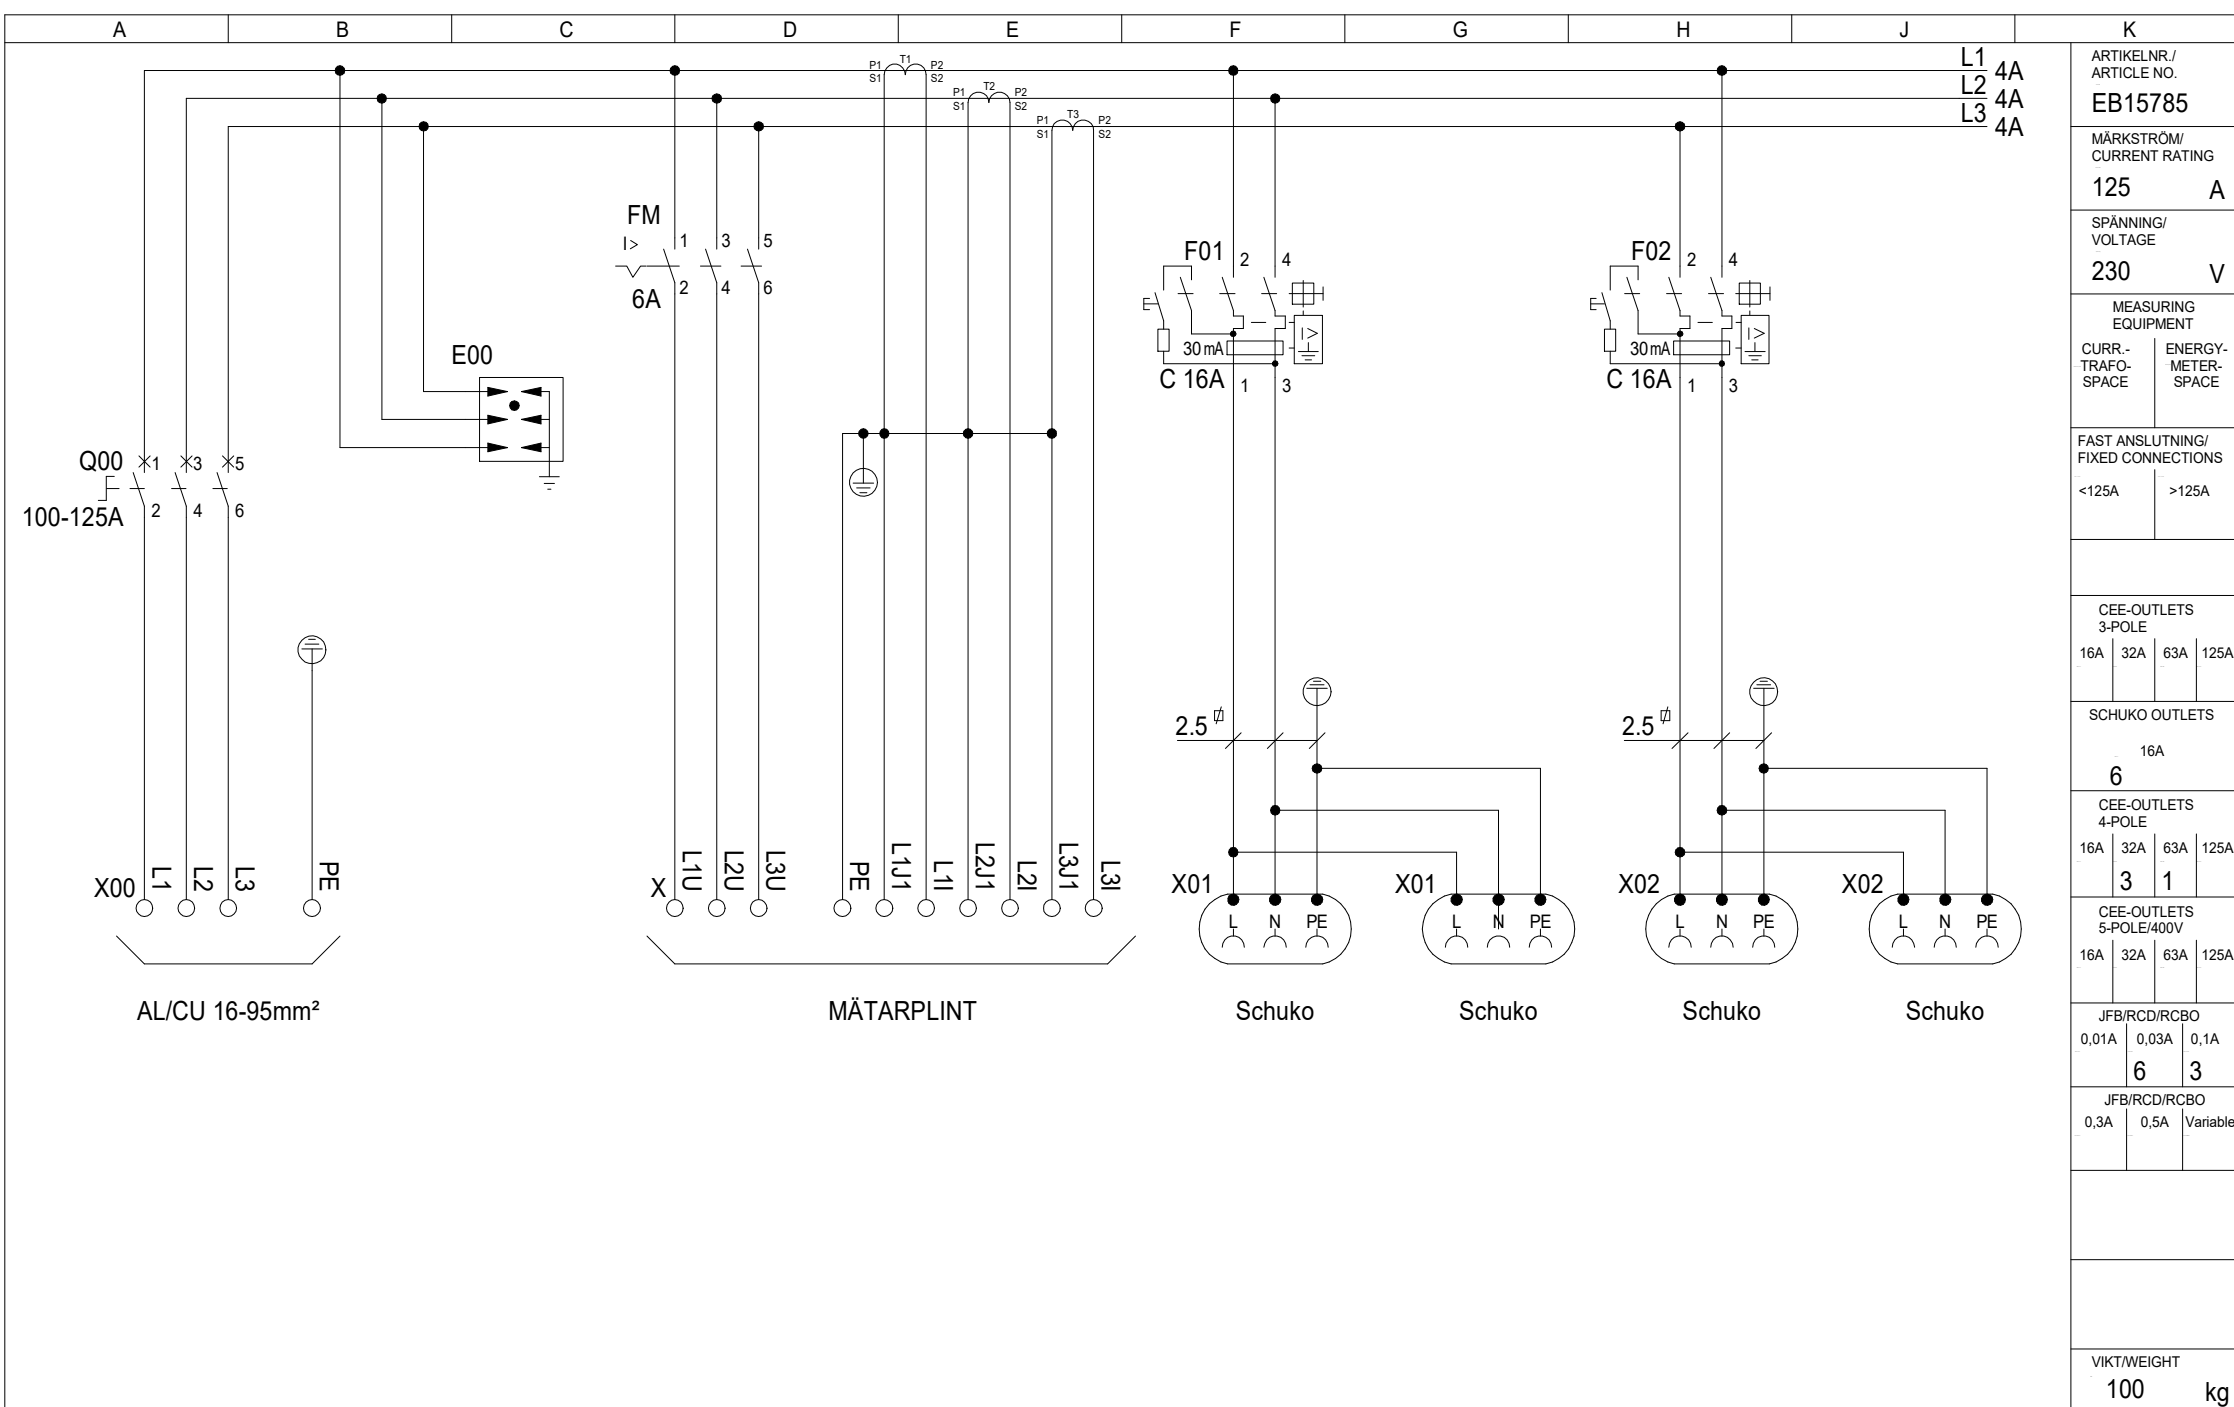 


This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

ZSF 125NBC 230//6031-601 EN



RITAD A/DRAWN BY CG	DATUM/DATE 220407	NEXT SHEET 4	SHEET 3
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB15785	

ARTIKELNR./ ARTICLE NO. EB15785			
MÄRKSTRÖM/ CURRENT RATING 125		A	
SPÄNNING/ VOLTAGE 230		V	
MEASURING EQUIPMENT			
CURR.- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING/ FIXED CONNECTIONS <125A		>125A	
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS 16A			
6			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
3	1		
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
JFB/RCD/RCBO 0,01A 0,03A 0,1A		6 3	
JFB/RCD/RCBO 0,3A 0,5A Variable			
VIKT/WEIGHT 100 kg			

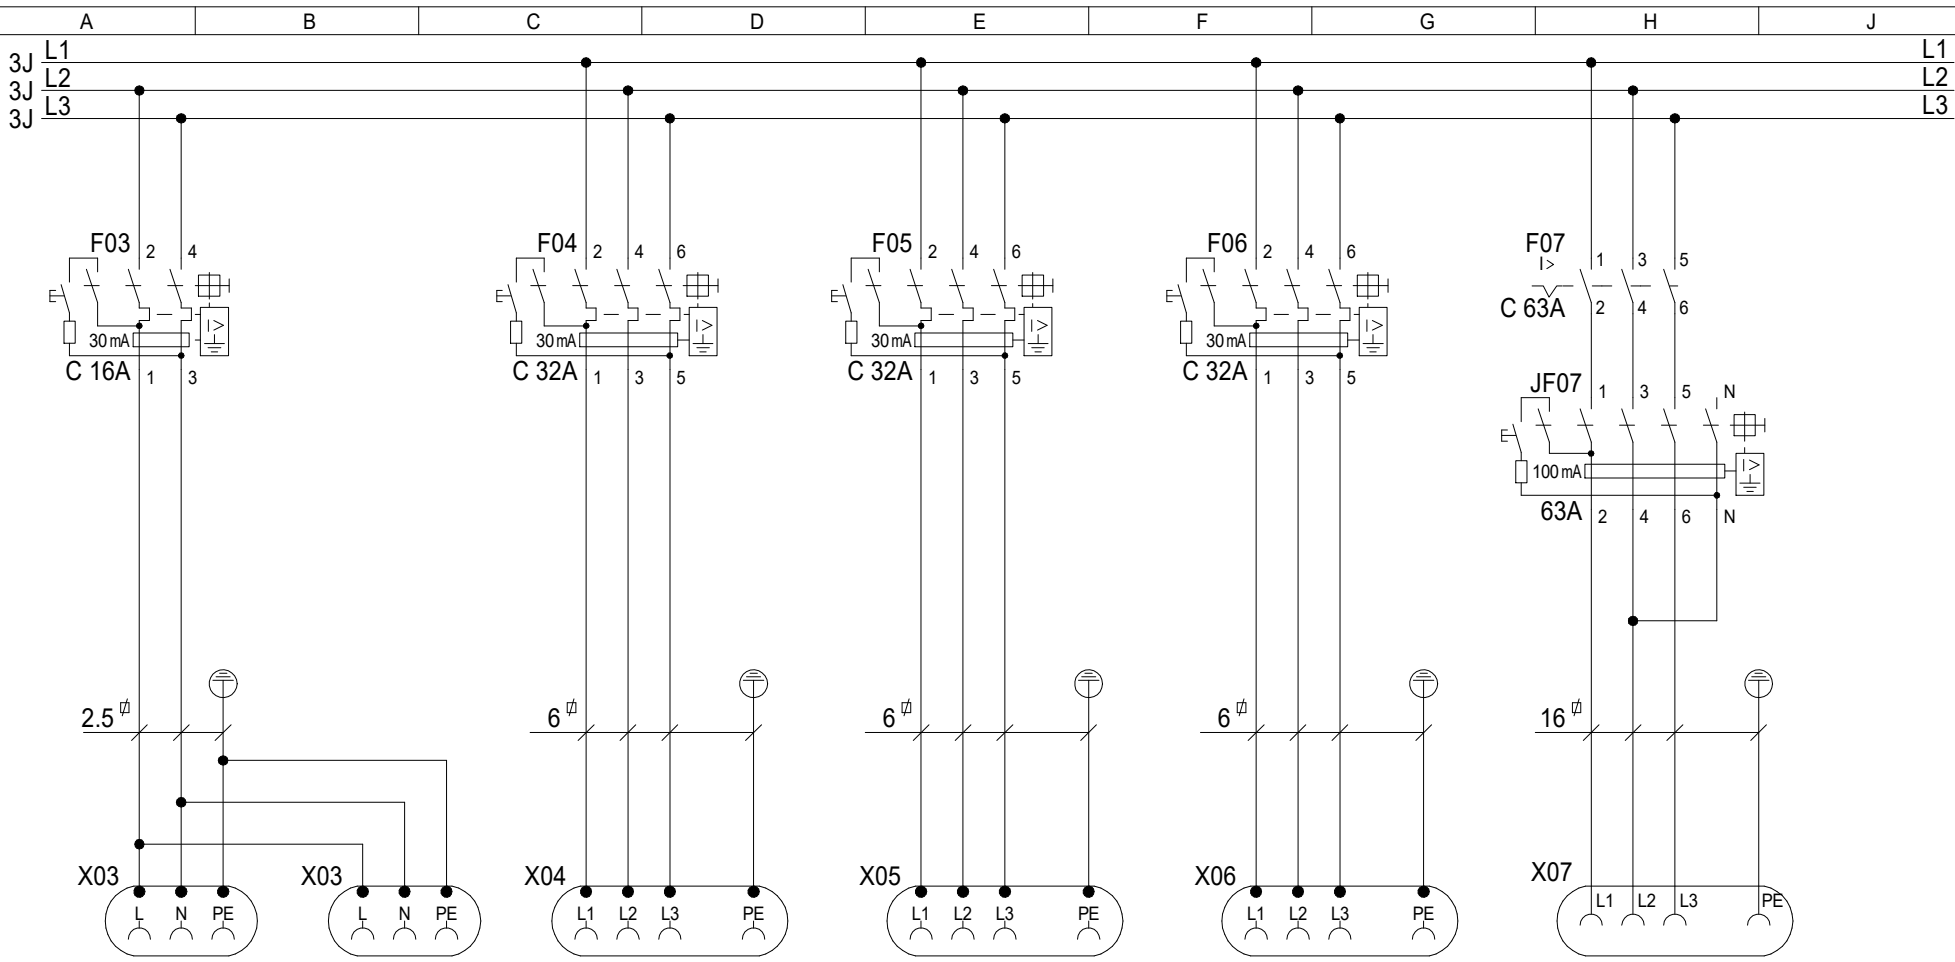 

Schuko

Schuko

CEE 332-9

CEE 332-9

CEE 332-9

CEE 363-9

ARTIKELNR./
ARTICLE NO.
EB15785

MÄRKSTRÖM/
CURRENT RATING
125 A

SPÄNNING/
VOLTAGE
230 V

MEASURING EQUIPMENT	
CURR.- TRAFO- SPACE	ENERGY- METER- SPACE

FAST ANSLUTNING/ FIXED CONNECTIONS	
<125A	>125A

CEE-OUTLETS 3-POLE			
16A	32A	63A	125A

SCHUKO OUTLETS	
16A	
6	

CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
3		1	

CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A

JFB/RCD/RCBO		
0,01A	0,03A	0,1A
6		3

JFB/RCD/RCBO		
0,3A	0,5A	Variable

VIKT/WEIGHT
100 kg

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

ZSF 125NBC 230//6031-601 EN



RITAD AVDRÄVN BY CG	DATUM/DATUM 220407	NEXT SHEET 5	SHEET 4
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB15785	

A	B	C	D	E	F	G	H	J	K
PC.	Position	Description	Type	Manufacturer	Data	Article No.	E-number(SE)		ARTIKELNR./ ARTICLE NO. EB15785
1		Skåp	NBC 700M	EI-Björn AB	900x1700x800mm	K287012			MÄRKSTRÖM/ CURRENT RATING 125 A
1		Insats	6333	EI-Björn AB	52mod	K287010			SPÄNNING/ VOLTAGE 230 V
4		Täckplåt	VE	EI-Björn AB	72x72, Vit	75091			MEASURING EQUIPMENT CURR- TRAFO- SPACE ENERGY- METER- SPACE
1	E00	Överspänningsskydd	SPCT2-385/3	Eaton	20kA, 3P, 385V	167605			FAST ANSLUTNING/ FIXED CONNECTIONS <125A >125A
3	F01-F03	RCBO	PKPM2-16/2/C/003-A	Eaton	C 16A, 30mA, 10kA	108111	2162432		CEE-OUTLETS 3-POLE 16A 32A 63A 125A
3	F04-F06	RCBO	PKPM3-32/3/C/003-A	Eaton	C 32A, 30mA, 10kA	136564			SCHUKO OUTLETS 16A
1	F07	MCB	PLSM-C63/3	Eaton	C 63A, 10kA	242480	2141635		CEE-OUTLETS 4-POLE 16A 32A 63A 125A
1	JF07	RCD	PFIM-63/4/01-A	Eaton	63A, 100mA, A	235444	2162247		CEE-OUTLETS 5-POLE/400V 16A 32A 63A 125A
1	Q00	MCCB	NZMB1-A125	Eaton	100-125A, 25kA	259080			JFB/RCD/RCBO 0,01A 0,03A 0,1A
1		Anslutning	NZM1-XKA	Eaton	AL/CU 16-95mm ²	266730			JFB/RCD/RCBO 0,3A 0,5A Variable
1		B-Skydd	NZM1-XKSA	Eaton		260021			
1		Etikett	Moment	EI-Björn AB	NZM1	83896			
6	X01-X03	Schukouttag	Typ F	Mennekes	16A, 230V, IP54	11020EB			
3	X04-X06	Uttag	332RU9	ABB	32A, 230V, IP44	2CMA193252R1000			
1	X07	Uttag	363RU9	ABB	63A, 230V, IP44	2CMA167524R1000	2416678		
									VIKT/WEIGHT 100 kg

This drawing is property of EI-Björn. May not be copied, shown or distributed without our written permission.

ZSF 125NBC 230//6031-601 EN



RITAD AV/DRAWN BY CG	DATUM/DATE 220407	NEXT SHEET	SHEET 5
SIGN	REVISION/ISSUE A*	RITNING NR./DRAWING EB15785	