

INSTRUKSJONER TIL BRUKERE AV MIDLERTIDIGE ELEKTRISKE ANLEGG

1. En kompetent person skal ha tilsyn med anlegget og være ansvarlig for driften. Feil bruk av det elektriske anlegget kan medføre fare for personskade og brann.
2. Sentralen skal plasseres loddrett eller på stativ, og med fritt betjeningsområde foran sentralen.
3. Faste tilkoblinger av kabler og bytte av sikringer skal bare utføres av fagfolk. Ved fast tilkobling av gummikabler skal strekkavlastningens klemflate være utført i isolasjonsmateriale. Ikke-fagfolk skal kun betjene jordfeilbryter, automatsikring og uttak for stikkontakter.
4. Sentralens dører skal være lukket og om nødvendig også låst. Dørene skal bare åpnes ved betjening av sentralen.
5. Elektriske apparater som er koblet til sentralen, skal kobles fra eller gjøres spenningsløse når de ikke er i bruk, for å unngå utilsiktet igangsetting eller anven delse av disse.
6. De elektriske apparatene som brukes, må oppfylle forskriftene og skal enten være utstyrt med ekstra isolasjon eller, i klasse 1-utførelse, med jordet stikkontakt.
7. Kabler må legges slik at de ikke blir skadet. Det gjelder kabler både innenfor og utenfor dørene.
8. Kabler eller apparater med feil skal frakobles og ikke tas i bruk igjen før de defekte delene er skiftet eller reparert.
9. Knivsikring må bare byttes av kompetent personale.

INSTRUCTIONS FOR USERS OF TEMPORARY ELECTRICAL INSTALLATIONS

1. Operation of the installation must be supervised by an authorised person. Incorrect use of the electrical installation could mean risk of personal injury and fire.
2. The distribution unit must be installed vertical or on a stand so that there is free access in front of the unit.
3. Permanent cable connection or replacement of fuses may only be carried out by qualified personnel. Permanently connected rubber-insulated cables must be secured with a restraint that has an insulating gripping surface. Unqualified personnel may only operate earth leakage circuit breakers, miniature circuit breakers and plug sockets.
4. Distribution unit doors must be closed and, where required, also locked. Doors must only be left open when carrying out work on the distribution unit.
5. Electrical equipment that is connected to distribution units must be disconnected or switched off when not in use in order to avoid unintentional starting up or switching on.
6. Electrical equipment that is used must comply with the requirements and must either have additional insulation or comply with class I and have an earthed plug.
7. Cables inside and outside the doors must be routed so as to avoid damaging them.
8. Cables or equipment that are defective must be disconnected and not used until the defective parts have been replaced or repaired.
9. Blade fuses may only be replaced by personnel who have the necessary training.


ARTIKELNR / ARTICLE NO. EB14779			
MÅRKSTRØM/ CURRENT RATING 125		A	
SPÅNNING/ VOLTAGE 400		V	
MEASURING EQUIPMENT			
CURR- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING/ FIXED CONNECTIONS			
<125A		>125A	
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS			
16A			
6			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
1	2	2	1
JFB/RCD/RCBO			
0,01A	0,03A	0,1A	
6			
JFB/RCD/RCBO			
0,3A	0,5A	Variable	
2			
VIKT/WEIGHT			
56			kg

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 125//61221-602 4P



RITAD AV/DRAWN BY CG	DATUM/DATE 191118	NEXT SHEET 2	SHEET 1
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB14779	

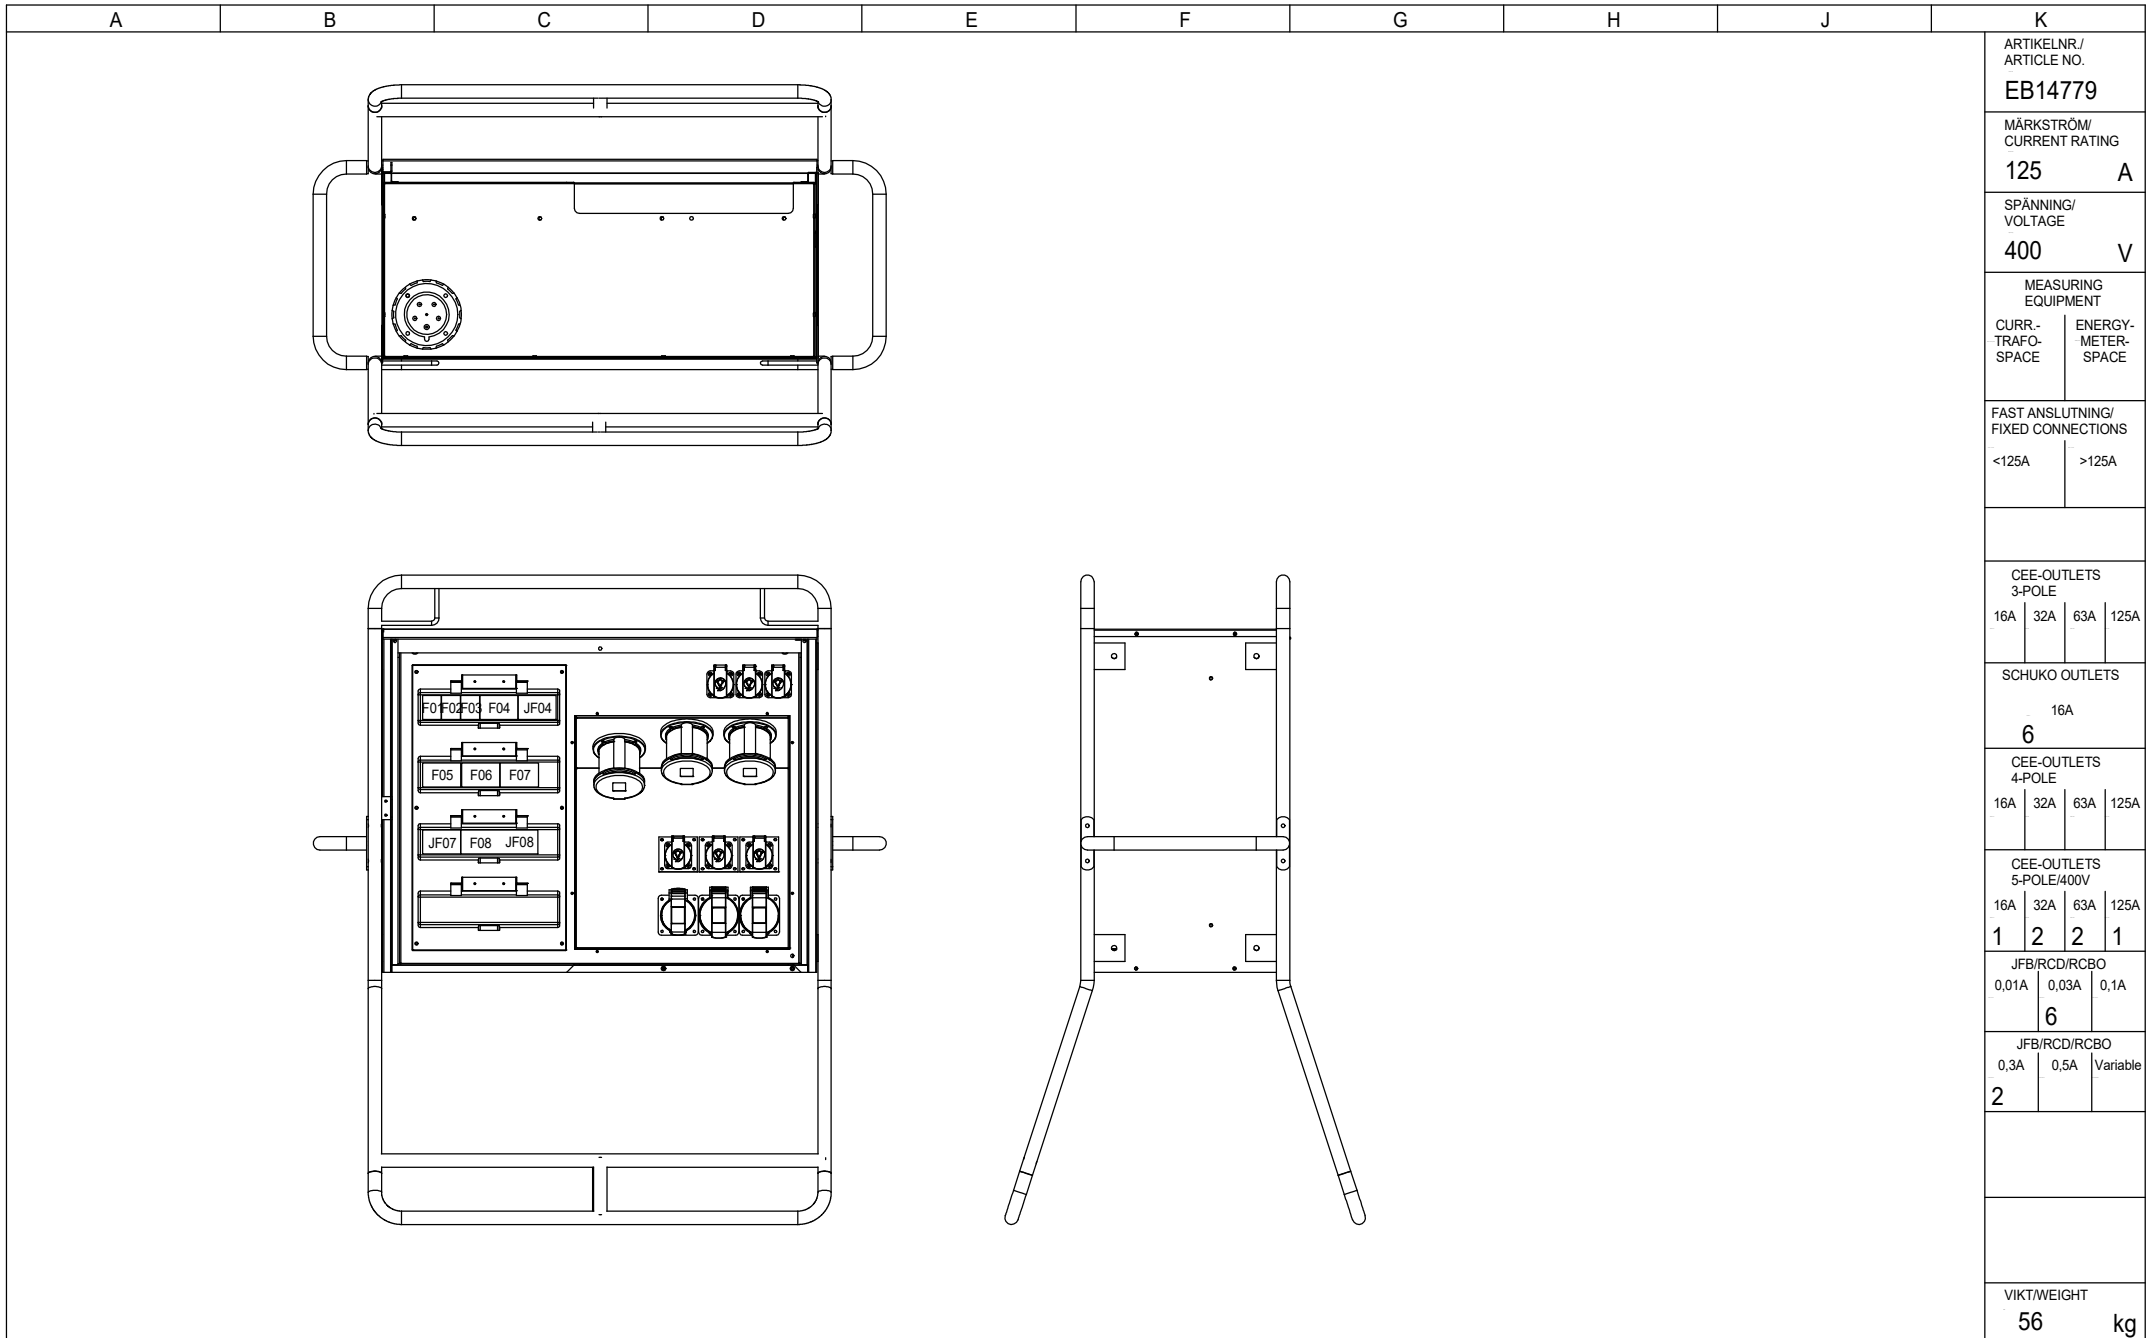


ARTIKELNR / ARTICLE NO.		EB14779	
MÄRKSTRÖM / CURRENT RATING		125	A
SPÄNNING / VOLTAGE		400	V
MEASURING EQUIPMENT			
CURR- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING / FIXED CONNECTIONS			
<125A	>125A		
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS			
16A			
6			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
1	2	2	1
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
1	2	2	1
JFB/RCD/RCBO			
0,01A	0,03A	0,1A	
6			
JFB/RCD/RCBO			
0,3A	0,5A	Variable	
2			
VIKT/WEIGHT			
56			kg

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 125//61221-602 4P



RITAD AV/DRAWN BY	DATUM/DATE	NEXT SHEET	SHEET
CG	191118	3	2
SIGN	REVISION/ISSUE	RITINGS NR./DRAWING	
	A*	EB14779	

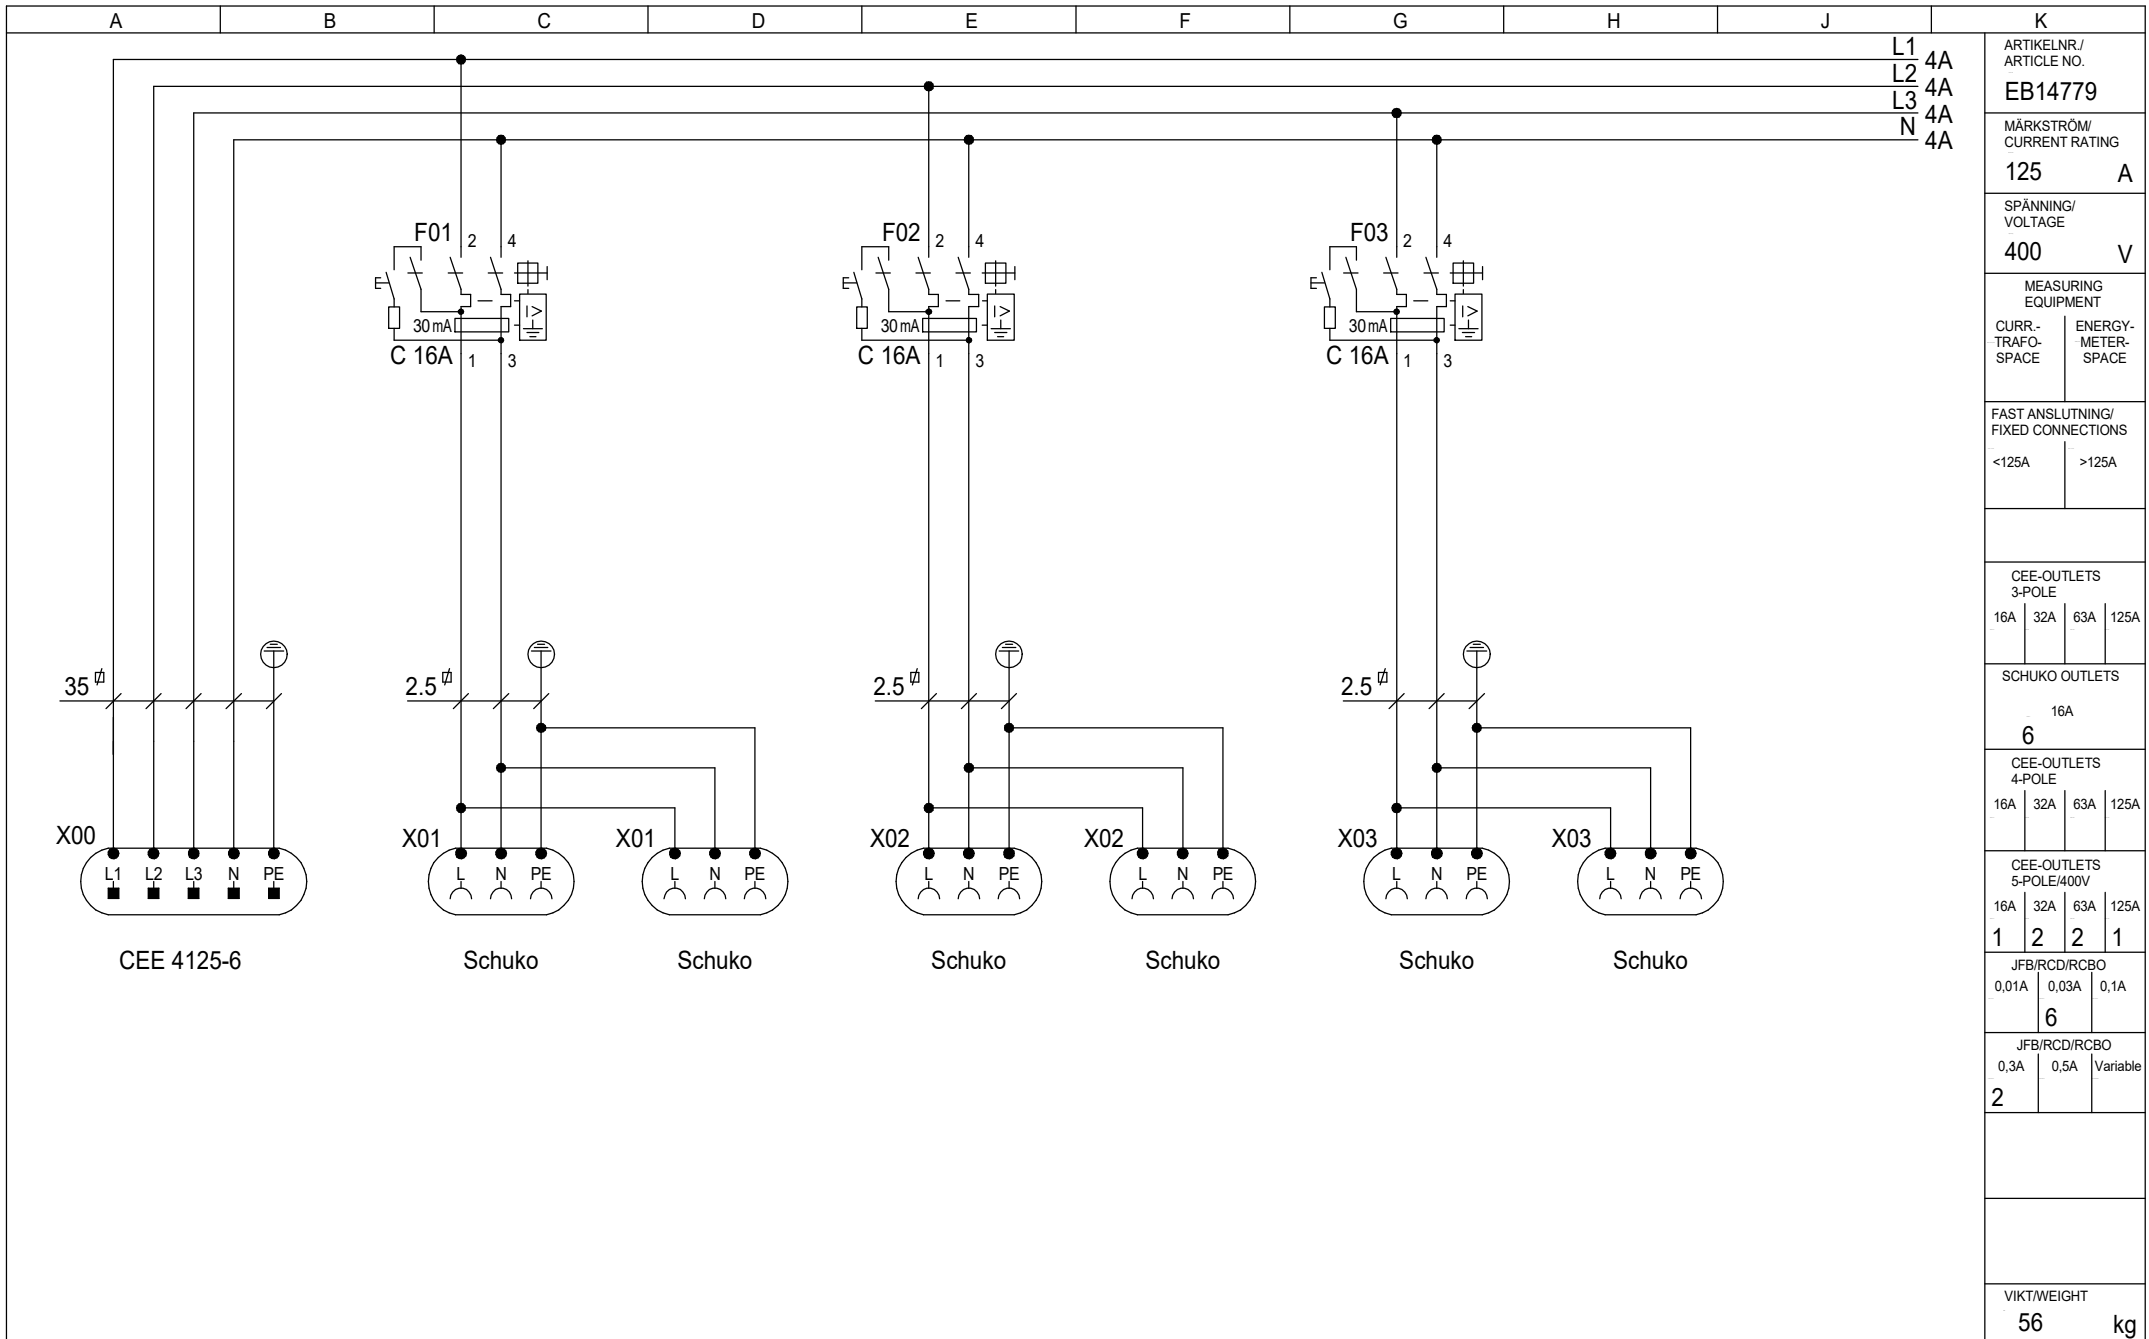


This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 125//61221-602 4P



RITAD AV/DRAWN BY	DATUM/DATE	NEXT SHEET	SHEET
CG	191118	4	3
SIGN	REVISION/ISSUE	RITINGS NR./DRAWING	
	A*	EB14779	

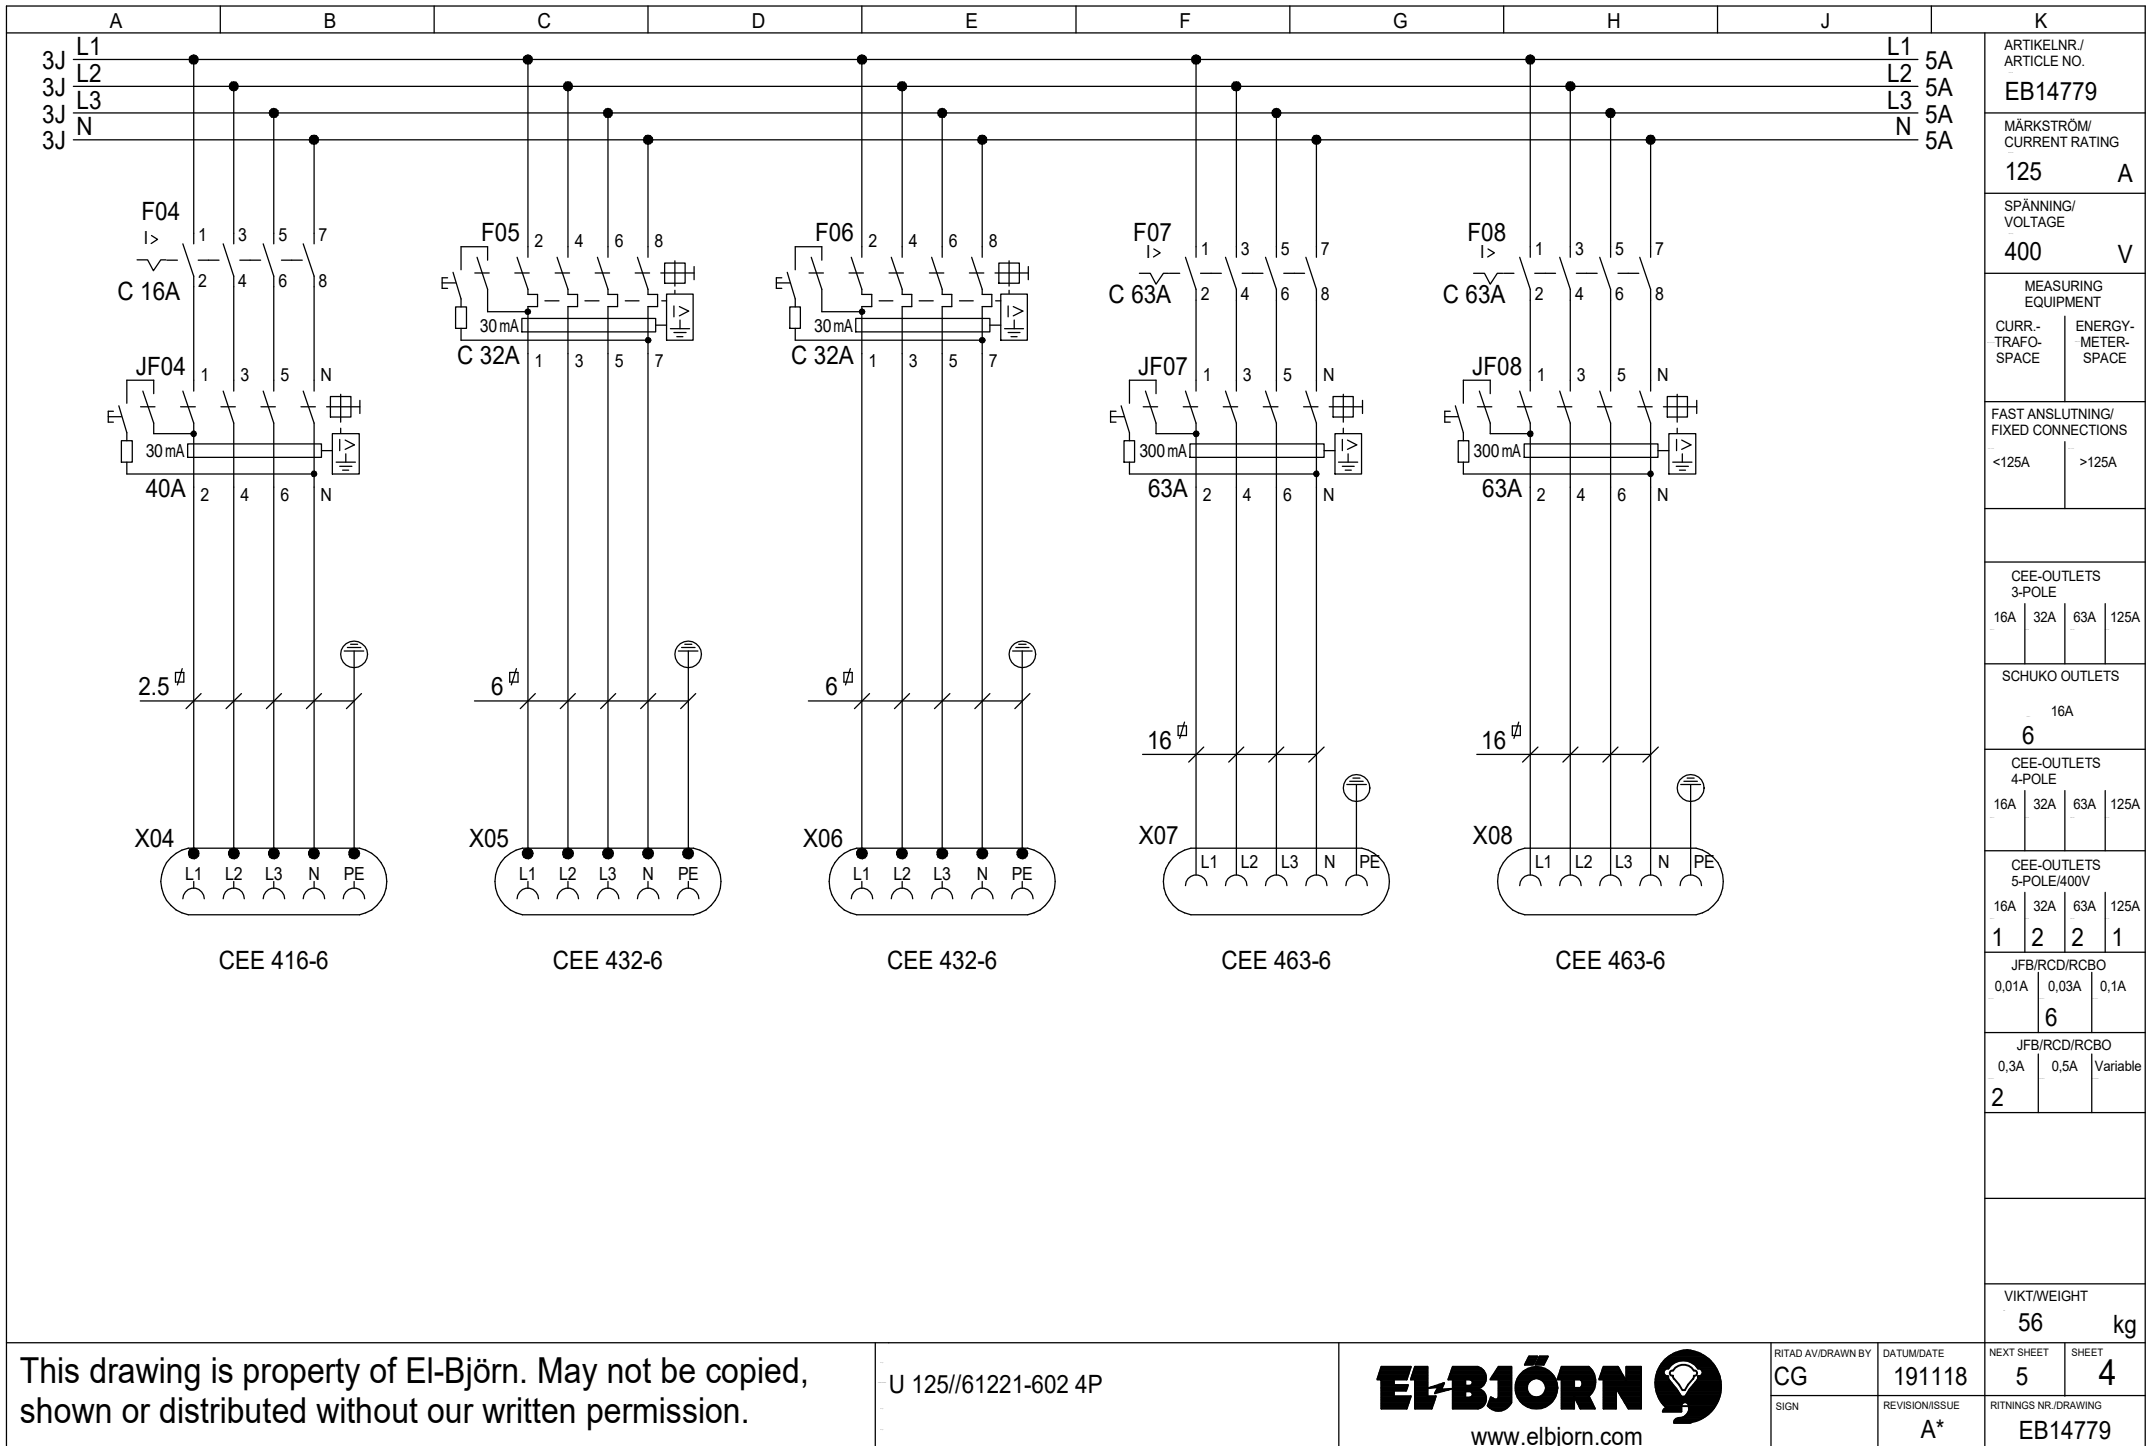



ARTIKELNR/ ARTICLE NO.		EB14779	
MÄRKSTRÖM/ CURRENT RATING		125	A
SPÄNNING/ VOLTAGE		400	V
MEASURING EQUIPMENT			
CURR- TRAFO- SPACE	ENERGY- METER- SPACE		
FAST ANSLUTNING/ FIXED CONNECTIONS			
<125A	>125A		
CEE-OUTLETS 3-POLE			
16A	32A	63A	125A
SCHUKO OUTLETS			
16A			
6			
CEE-OUTLETS 4-POLE			
16A	32A	63A	125A
CEE-OUTLETS 5-POLE/400V			
16A	32A	63A	125A
1	2	2	1
JFB/RCD/RCBO			
0,01A	0,03A	0,1A	
6			
JFB/RCD/RCBO			
0,3A	0,5A	Variable	
2			
VIKT/WEIGHT			
56 kg			

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 125//61221-602 4P



RITAD AV/DRAWN BY	DATUM/DATE	NEXT SHEET	SHEET
CG	191118	6	5
SIGN	REVISION/ISSUE	RITINGS NR./DRAWING	
	A*	EB14779	

A	B	C	D	E	F	G	H	J	K
PC.	Position	Description	Type	Manufacturer	Data	Article No.	E-number(SE)		ARTIKELNR / ARTICLE NO. EB14779
1	-	Skåp	U 125	El-Björn AB	860 x 1115 x 700mm	H90971			MÄRKSTRÖM/ CURRENT RATING 125 A
4		Axel	Säkringslock	El-Björn AB	4x158mm	30110			SPÄNNING/ VOLTAGE 400 V
1		Beröringsskydd	SF 125	El-Björn AB		136511			MEASURING EQUIPMENT
4		Fjäder	Säkringslock	El-Björn AB		118021			CURR- TRAFO- SPACE ENERGY- METER- SPACE
1		Frontplåt	SF 125	El-Björn AB		136510			FAST ANSLUTNING/ FIXED CONNECTIONS
1		Svep	Uttagsdel	El-Björn AB		136513			<125A >125A
4		Säkringslock	UC 63	El-Björn AB	14mod	40016			CEE-OUTLETS 3-POLE
1		Uttagsplåt	SF 125	El-Björn AB		136514			16A 32A 63A 125A
3		Täckplåt	VE 416/10A	El-Björn AB	RU/Schuko, Vit	75090			SCHUKO OUTLETS
3	F01-F03	RCBO	PKPM2-16/2/C/003-A	Eaton	C 16A, 30mA, 10kA	108111	2162432		16A
1	F04	MCB	PLSM-C16/3N	Eaton	C 16A, 10kA	242543	2141656		6
2	F05-F06	RCBO	mRB4-32/3N/C/003-A	Eaton	C 32A, 30mA, 4,5kA	167508			CEE-OUTLETS 4-POLE
2	F07-F08	MCB	PLSM-C63/3N	Eaton	C 63A, 10kA	242549			16A 32A 63A 125A
1	JF04	RCD	PFIM-40/4/003-A-MV	Eaton	40A, 30mA, 4P, A	235439	2162237		CEE-OUTLETS 5-POLE/400V
2	JF07-JF08	RCD	PFIM-63/4/03-A-MV	Eaton	63A, 300mA, 4P, A	235445	2162249		16A 32A 63A 125A
1	X00	Intag	4125BU6W	ABB	125A, 400V, IP67	2CMA167204R1000	2417431		JFB/RCD/RCBO
6	X01-X03	Schukouttag	Typ F	Mennekes	230V, 16A, IP54	11020EB			0,01A 0,03A 0,1A
1	X04	Uttag	416RU6	ABB	16A, 400V, IP44	2CMA192642R1000	2416633		6
2	X05-X06	Uttag	432RU6	ABB	32A, 400V, IP44	2CMA192658R1000	2416660		JFB/RCD/RCBO
2	X07-X08	Uttag	463RU6	ABB	63A, 400V, IP44	2CMA192664R1000	2416680		0,3A 0,5A Variable
1	X09	Uttag	4125RU6W	ABB	125A, 400V, IP67	2CMA167142R1000	2416787		2
									VIKT/WEIGHT
									56 kg

This drawing is property of El-Björn. May not be copied, shown or distributed without our written permission.

U 125//61221-602 4P



RITAD AV/DRAWN BY CG	DATUM/DATE 191118	NEXT SHEET	SHEET 6
SIGN	REVISION/ISSUE A*	RITINGS NR./DRAWING EB14779	